


# MOFFAT versi-cook


## 1. Stand-by Screen

*Touch here to start the VG8 and enter the Home Screen.*

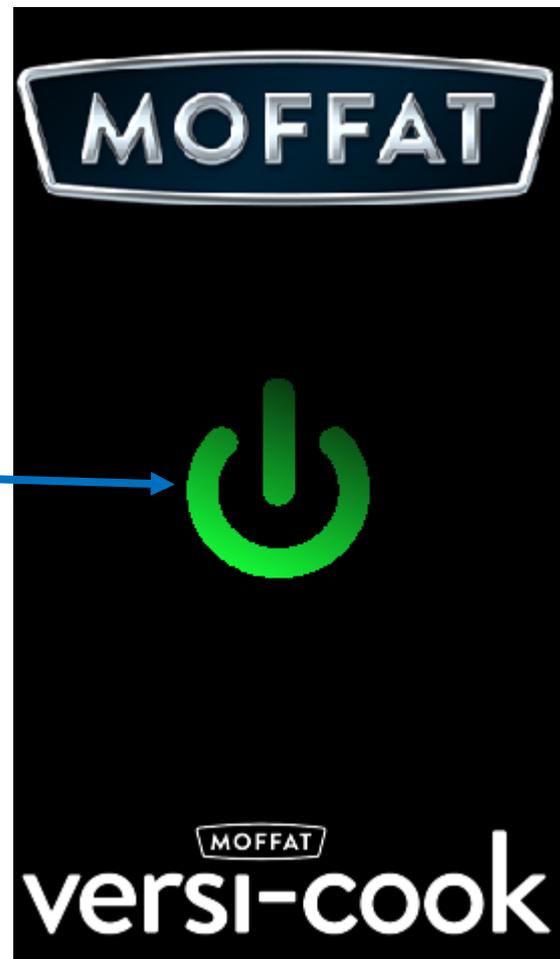

# MOFFAT versi-cook

## 2. Home Screen

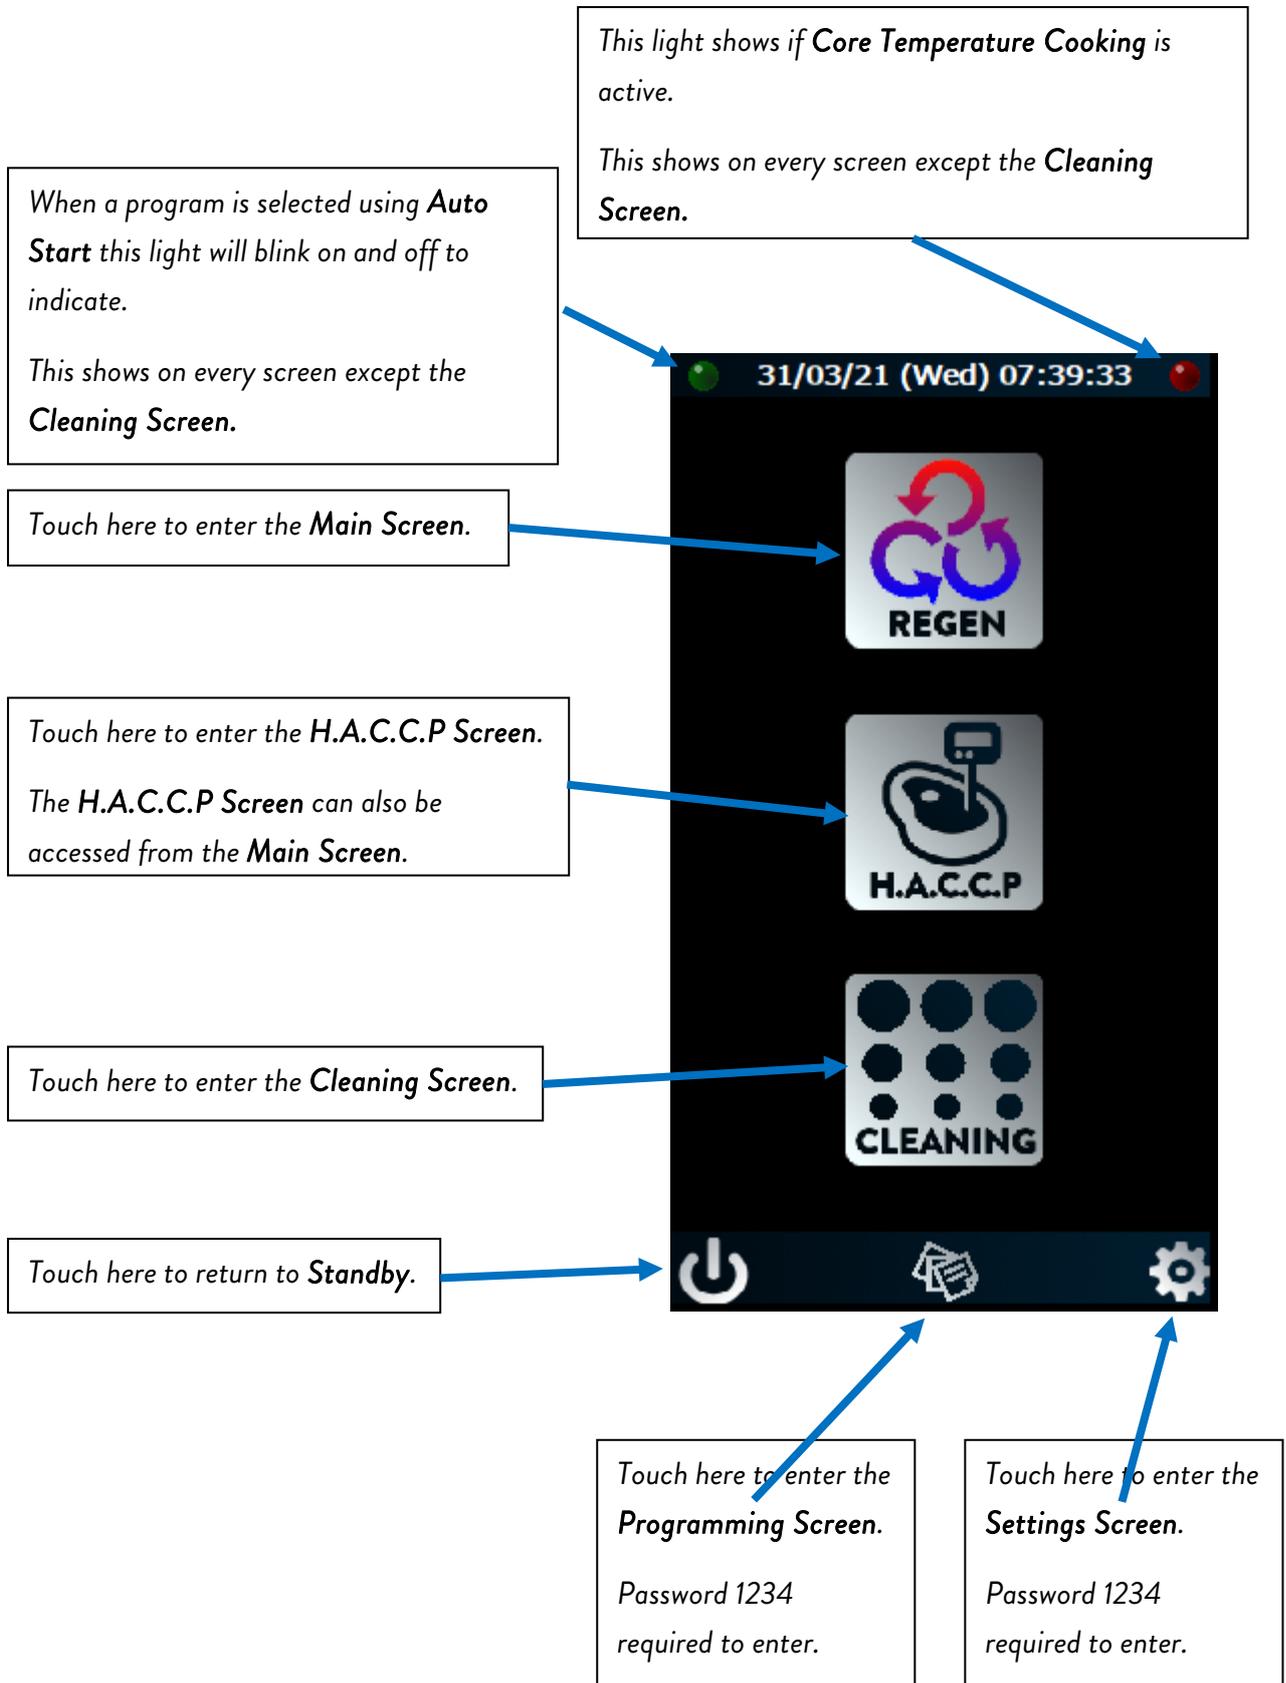

# MOFFAT versi-cook

## 3. Programming Screen

To set programs select temp and time.

Select program after to save desired temps and times.

Reset all set programs with the time reset button.

Touch here to return to *Home Screen*.

The screenshot shows the 'PROGRAM SET' screen with the following data:

OVEN	TEMP	TIME
ZONE 1	0°C	0min
ZONE 2	0°C	0min
ZONE 3	0°C	0min

Below this is the '7 DAY TIMER' section:

START	HOUR	MIN
P1	00	00
P2	00	00
P3	00	00

At the bottom, there are two circular icons: one with a clock and a refresh symbol, and another with a clock and a refresh symbol. The bottom navigation bar includes a home icon, the word 'PROGRAM', and three buttons labeled '1', '2', and '3'.

# MOFFAT versi-cook

## 3.1 Auto Start

Select the temperature required and time you want the oven to start at every day.

To set auto timer select temp and time.

Select which program you have the start time in.

Press the **Auto Start** button to begin.

Reset switch to reset all values back to zero and stop auto timer.

Touch here to return to **Home Screen**.

The screenshot shows the oven's control interface. At the top, the date and time are 31/03/21 (Wed) 07:39:44. Below this is the 'PROGRAM SET' screen with a table:


OVEN	TEMP	TIME
ZONE 1	0°C	0min
ZONE 2	0°C	0min
ZONE 3	0°C	0min

Below the 'PROGRAM SET' screen is the '7 DAY TIMER' screen with a table:

START	HOUR	MIN
P1	00	00
P2	00	00
P3	00	00

At the bottom of the screen, there is a home icon, a 'PROGRAM' label, and three buttons labeled 1, 2, and 3. There are also two circular icons: one with a clock and a refresh symbol, and another with a clock and a refresh symbol.

Once enabled the **Auto Start** icon and the light in the top left of the screen will change to those shown below.

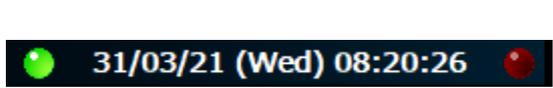

## 4. Settings Screen

Selecting any of the temperatures or times on this screen will allow for adjustment.

31/03/21 (Wed) 07:40:15

Boost Temp 0°C

Boost Time 0m

Pre-Heat Temp 0°C

Pre-Heat Time 0m

Hold Temp 0°C

Probe Offset 0°C

Core Probe Offset 0°C

HACCP Value 0°C

Australia = 60 & variable  
England = 75  
Scotland = 82  
Scotland NHS etc = 85

Home icon | Firmware VG8 2.00

Touch here to return to **Home Screen**.

The default values are:

Boost Temp:	160°C
Boost Time:	10m
Pre-Heat Temp:	160°C
Pre-Heat Time:	30m
Hold Temp:	90°C
Probe Offset:	7°C
Core Probe Offset:	0°C
HAACCP Value:	85°C

MOFFAT


# versi-cook

## 5. Main Screen


The **Main Screen** allows the user to regenerate/cook food. **BOOST** can be used if the food is not quite ready. **PRE-HEAT** will heat the oven to the temperature in the **Settings Screen** for the time set. **HOLD** can be used if the food needs to be kept hot for a while. **H.A.C.C.P** and **CORE TEMP** will be explained on their own pages.

Touch these to manually enter a time and temperature to each zone.  
Entering a time into the top two will populate every zone with the entered values.  
Zones 2 and 3 can then be changed independently if required.

Touch here to return to **Home Screen**.

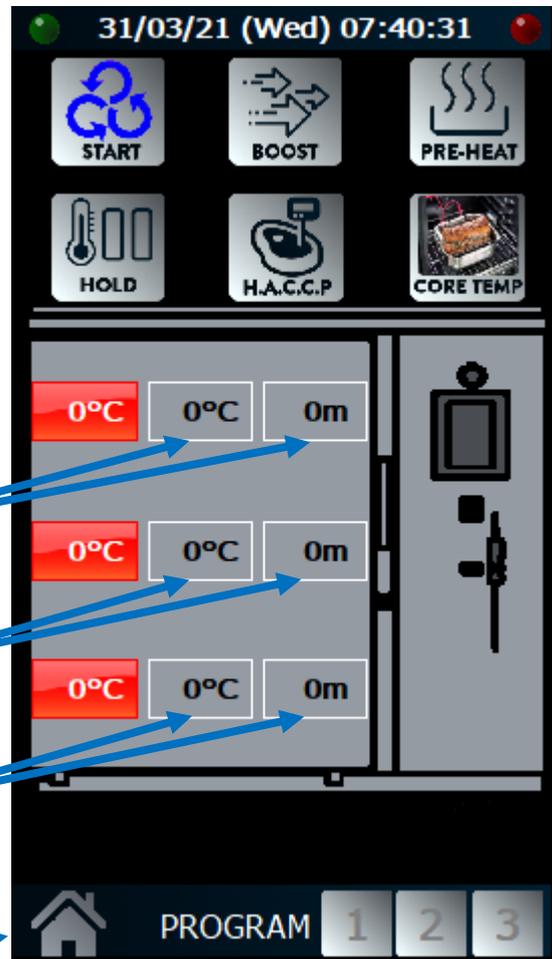

Programs set in the **Programming Screen** can be called by pressing any of the 3 buttons. The button will highlight as shown. Selecting a program will cancel any manually entered temperatures and times, or previously selected programs.

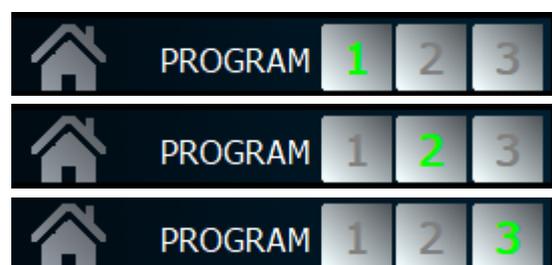

# MOFFAT versi-cook

## 6. H.A.C.C.P Screen

The **H.A.C.C.P Screen** is used to log the temperature of food.

Insert a **USB flash drive** into the **USB port** located above the display.

Insert the **H.A.C.C.P Probe** located below the display into the food required.

Wait until the temperature display has settled and press the button corresponding the food type followed by the **Save** button.

Once all foods have been measured, press the **Download** button to save the data to the **USB flash drive**.

Touch here to return to the previous screen.



Save button.

Download button.

# MOFFAT versi-cook

## 7. Core Temperature Screen

The **Core Temperature Screen** can be used to enable core temperature cooking.

Core temperature cooking can be used instead of cooking via time. The time boxes on the **Main Screen** can be left at 0m if desired.

To enable core temperature cooking touch here.

Touch here to return to **Main Screen**.

Once enabled the start icon and the light in the top right of the screen will change to those shown below.



Core temperature cooking uses the temperature in H.A.C.C.P Value on the **Settings Screen** to determine when the food has reached temperature.

Once this temperature is reached, the buzzer will sound, and an alert will show notifying the user that the core temperature cooking is finished. This alert can be used to cancel the buzzer.

MOFFAT

# versi-cook

## 8. Cleaning Screen

While in the **Cleaning Screen** the oven will heat up and maintain a temperature for 45 minutes.

Leaving this screen will end the cleaning cycle.

It is recommended that before entering this screen, a tray with ½ litre of water and mild detergent is placed in the bottom of the oven chamber.



Touch here to return to **Home Screen** and end the cleaning cycle.



MOFFAT

# versi-cook

24/03/21 (Wed) 09:19:06

0

←

7	8	9	Esc
4	5	6	Clr
1	2	3	-
0	.	Ent	

Enter Time